

Use and Application Instructions

Print bands using a Monochrome or Color Laser Printer. Please check with Endur ID for the proper printer settings for your model printer.



Pull sleeve from box and tear off a perforation.



Place sleeve shiny side down.



Fold on perforated line.
Shiny side showing.



Run finger or hard object along crease to create crisp edge.



Lift wristband from carrier until 1/4 inch adhesive is exposed. Slide sleeve over band.




Slide laminate left towards adhesive. Overlapping laminate over tab.



Verify that crease is even on the top edge of the wristband.



Feed into laminator tab closure end first.

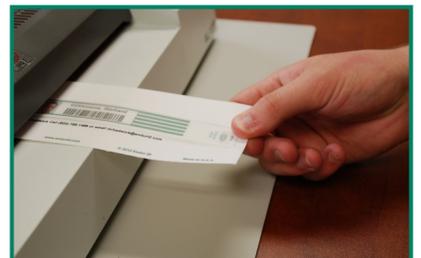

Place finger on edge of wristband to guide it straight through the laminator.